

Duet Web Control and Repetier Server Macros

Baby Stepping - clear (set zero)

```
M290 R0 S0 ;clear babystepping
```

Baby Stepping - Down 0.1 mm

```
M290 S-0.1
```

Show network config

```
M552  
M540
```

Change to static IP address (switch mode)

This macro makes only sense in Repetier Server!

For Duet of Trikarus we use **169.254.XXX.XXX**. This also could be integrated/replaced in config.g file.

```
M552 S0 ;disable network  
;M553 P255.255.0.0  
M553 P255.255.255.0 ;set netmask  
M552 S1 P169.254.XXX.XXX ;set static IP
```

Change to static IP address (mesh mode)

In mesh mode Duet receives a changing IP by DHCP all the time. But you can also set a static IP address if that IP is free and not conflicting with other devices. It can be a good idea to use IP addresses in **range 10.149.0.2 - 10.149.0.254**. For Duet of Trikarus we

use **10.149.YYY.YYY**. This also could be integrated/replaced in config.g file. Please note that hangdevice needs to be in the **same network (e.g. 10.149.YYY.YYY)**, otherwise it is not reachable!

At the moment this mode is not used

```
;M552 S0 ;disable network
;M553 P255.255.0.0
;M553 P255.255.255.0 ;set netmask
;M552 S1 P10.149.YYY.YYY ;set static IP
M117 "Not used at the moment. Please use dynamic IP address"
```

Change to dynamic IP address (mesh mode)

```
M552 S0 ;disable network
M552 S1 P0.0.0.0
```

Allow outbound movements

```
M564 S0 H0
```

Disallow outbound movements

```
M564 S1 H0
```

Enable Smart Steppers

```
G0 H2 A0.01
G0 H2 B0.01
G0 H2 C0.01
G0 H2 D0.01
```

Diagnostics (M122)

```
M122
```

rotaryEncoderTest

```
;heat up the nozzle to 205 °C and wait for it
```

```
G10 P0 R140 S205
```

```
T0
```

```
M116
```

```
;50 times extrude and retract 5 mm with 60 mm/s
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

```
G1 E-5 F3600
```

```
G1 E+5 F3600
```

G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600

G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600

G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600
G1 E+5 F3600
G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

 
G1 E-5 F3600

G1 E+5 F3600

G1 E-5 F3600

G1 E+5 F3600

Turn off Laser Pointers



In Repetier Server this works not fine out of the box using the "fan control", so we use a special macro (not required for Duet Web Control).

Version #1

Erstellt: 2026-06-08 14:36:09 CEST von Mario Voigt

Zuletzt aktualisiert: 2026-06-08 14:38:06 CEST von Mario Voigt